

Installation speaker

AIR series has been created as the series of installation-dedicated speakers, backed-up with various mounting hardware options for ease and versatility of set-up.


Benefiting from truly point-source design based on coaxial and full-range speakers, AIR series opens a new dimension for speaker placement to achieve best possible coverage while keeping sound system visual imprint to the lowest possible minimum.

Powerful installation-dedicated system with 2 \times 10" woofers. Compact and carefully optimized enclosures have been designed to make the model fit into any interior, achieving most performance per the space occupied.





DIMENSIONS

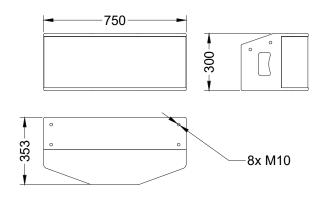

SPECIFICATIONS

Frequency Response (-10dB)	55 - 18000 Hz
Max SPL ¹	136,5 dB
Sensitivity (1W/1m)	98 dB
LF Driver	2x 10", 3" VC
HF Driver	2", 3" VC
Nominal Coverage (H x V)	85° x 55°
Impedance	4 / 8 Ohm
Nominal power ²	850 W
Connectors	Barrier strip
Dimensions (W×H×D)	750x300x353 mm
Net weight	35 kg
Shipping weight	37 kg
Mounting	8x M10 Mounting points
Enclosure material	Plywood, wear-resistant paint
Speaker protection	Steel grill, acoustically transparent backing

- ¹ pink noise, filtered according to AES 2 2012, crest factor 9 dB
- ² based on transducer power measured according to AES 2 2012

CONNECTIONS

Use Hi-pass filter to prevent speaker damage and distorted sound by eliminating low non-audible frequencies in input signal.

Do not exceed input power ratings mentioned in specifications while exploiting the speaker system.

Speaker system comes with barrier strip screw terminals for connection to amplifier.

	Signal +	Terminal +
	Signal -	Terminal -
	High pass filter:	
	Freq, no less than	45 Hz
	Order, no less than	18 dB/oct
Re	ecommended amplifier power	850 - 1700 W on nominal impedance

SAFETY INSTRUCTIONS

- 1. Do not pour liquids on speaker system this may cause driver cone destruction and unappealing speaker appearance. Do not allow direct sunlight on speaker cone in order to prevent premature failure. Do not install speaker system near open flames or heating elements.
- 2. Do not use speaker system with damaged speakON or speaker cable so as not to cause electric shock hazard or fire hazard.
- 3. Make sure speaker system is firmly set up on the floor, stage, or wall (where applicable).
- 4. While setting speaker system up onto an angled or slippery surface, make the necessary arrangements to avoid vibration-induced movement.
- 5. Speaker system is capable of delivering significant sound pressure levels. To avoid permanent or temporary hearing damage, prolonged exposure to sound pressure levels exceeding 90 dB should be limited.